Scilab Manual for Radio Frequency Circuit Design by Prof Nandini Ammangi Electronics Engineering VESIT[1]

Solutions provided by
Nandan Hegde
Electronics Engineering
V.E.S.I.T/Mumbai

November 29, 2026

[1]Funded by a grant from the National Mission on Education through ICT, http://spoken-tutorial.org/NMEICT-Intro. This Scilab Manual and Scilab codes written in it can be downloaded from the "Migrated Labs" section at the website http://scilab.in

Contents

List of Scilab Solutions 3

1 To plot frequency response of high frequency resistor 5

2 To plot frequency response of high frequency capacitor 9

3 To plot frequency response of high frequency inductor 13

4 To plot SWR circle for an impedance 17

5 To plot efficiency of different types of amplifiers 21

List of Experiments

Solution 1.1	To plot frequency response of high frequency resistor	5
Solution 2.1	To plot frequency response of high frequency capacitor	9
Solution 3.1	To plot frequency response of high frequency inductor	13
Solution 4.1	To plot SWR circle for an impedance	17
Solution 5.1	To plot efficiency of different types of amplifiers	21

List of Figures

1.1 To plot frequency response of high frequency resistor 6
1.2 To plot frequency response of high frequency resistor 7

2.1 To plot frequency response of high frequency capacitor . . . 10
2.2 To plot frequency response of high frequency capacitor . . . 11

3.1 To plot frequency response of high frequency inductor 14
3.2 To plot frequency response of high frequency inductor 15

4.1 To plot SWR circle for an impedance 18
4.2 To plot SWR circle for an impedance 19

5.1 To plot efficiency of different types of amplifiers 22
5.2 To plot efficiency of different types of amplifiers 23

Experiment: 1

To plot frequency response of high frequency resistor

Scilab code Solution 1.1 To plot frequency response of high frequency resistor

```
1 //To plot the frequency response of high frequency
     Resistor
2 //Scilab 5.4.1;64 bit(windows 8)
3 f=10^4:10^5:10^10;
4 w=2*%pi.*f;
5 mu0=4*%pi*10^-7;
6 l=2*2.5*10^-2;
7 a=2.032*10^-4;
8 temp=log(2*l/a)/log(%e);
9 lex=mu0*l*(temp-1)/(2*%pi); //external inductance
10 r=2*10^3;                  // resistance
11 c=5*10^-12;                //capacitance
12 z=w*lex*%i+1 ./(w*c*%i+1/r); //impedance
13 plot2d("gll",f,abs(z));
```

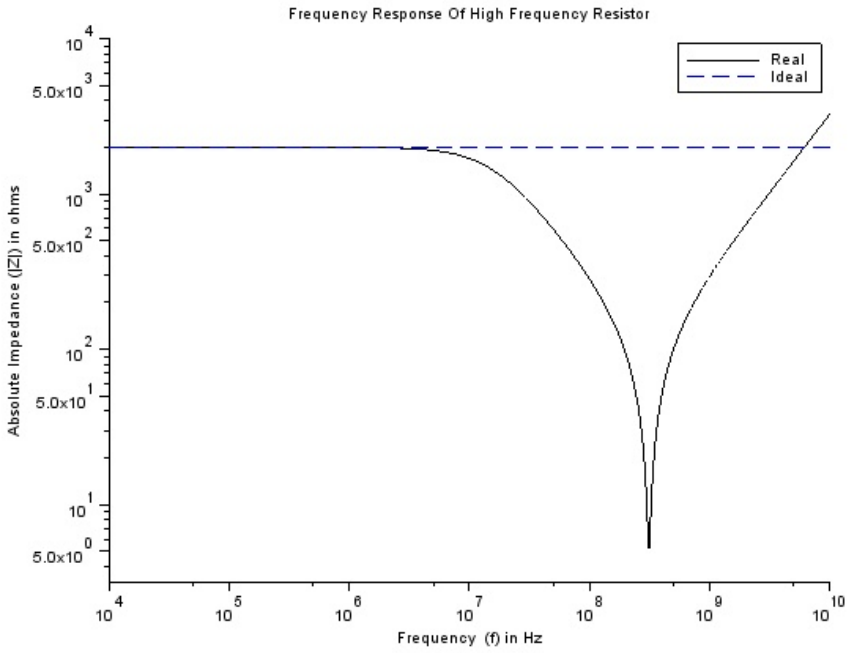


Figure 1.1: To plot frequency response of high frequency resistor

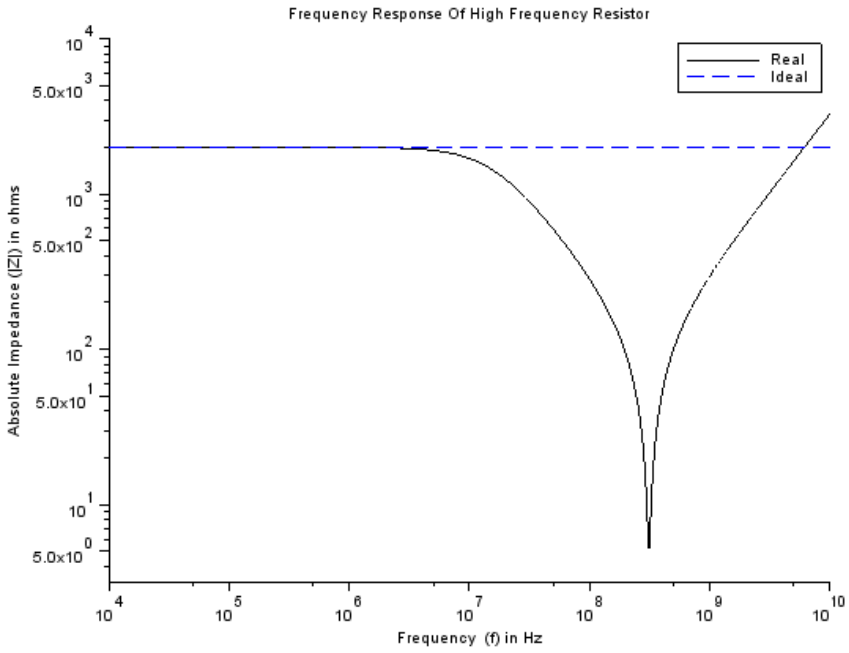


Figure 1.2: To plot frequency response of high frequency resistor

```
14 plot(f,r,"--");
15 title("Frequency Response Of High Frequency Resistor
     ");
16 xlabel('Frequency  (f) in Hz');
17 ylabel('Absolute Impedance (|Z|) in ohms');
18 legend(["Real ";"Ideal"]);
```

Experiment: 2

To plot frequency response of high frequency capacitor

Scilab code Solution 2.1 To plot frequency response of high frequency capacitor

```
1 //To plot frequency response of hgh frequency
    Capacitor
2 //Scilab 5.4.1;64 bit(windows 8)
3 f=10^6:10^7:10^10;
4 rs=(4.8*10^-6).*sqrt(f);
5 re=(33.9*10^12) ./f;
6 mu0=4*%pi*10^-7;
7 c=47*10^-12;
8 w=2*%pi.*f;
9 l=2*1.25*10^-2;
10 a=2.032*10^-4;
11 temp=log(2*l/a)/log(%e);
12 lex=mu0*l*(temp-1)/(2*%pi);          //external
    inductance
```

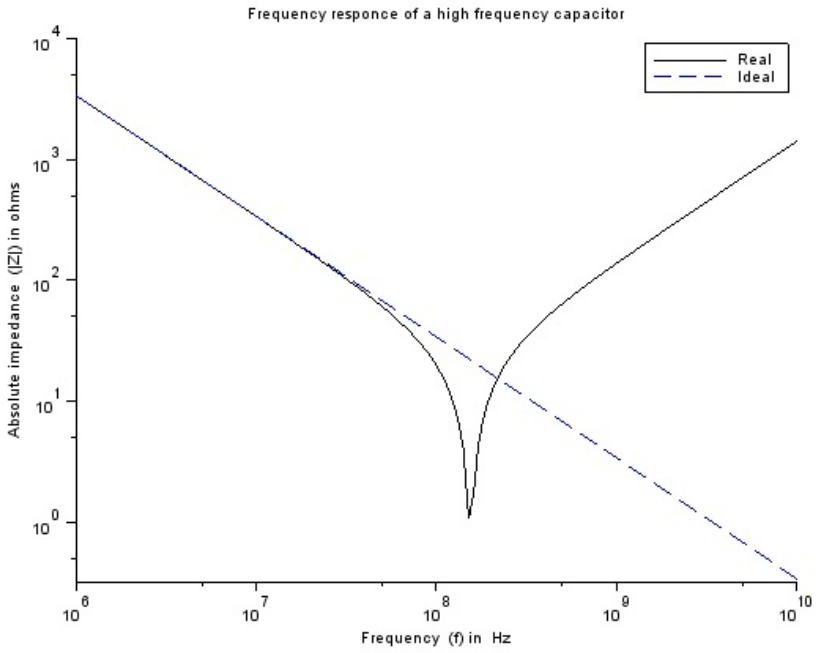


Figure 2.1: To plot frequency response of high frequency capacitor

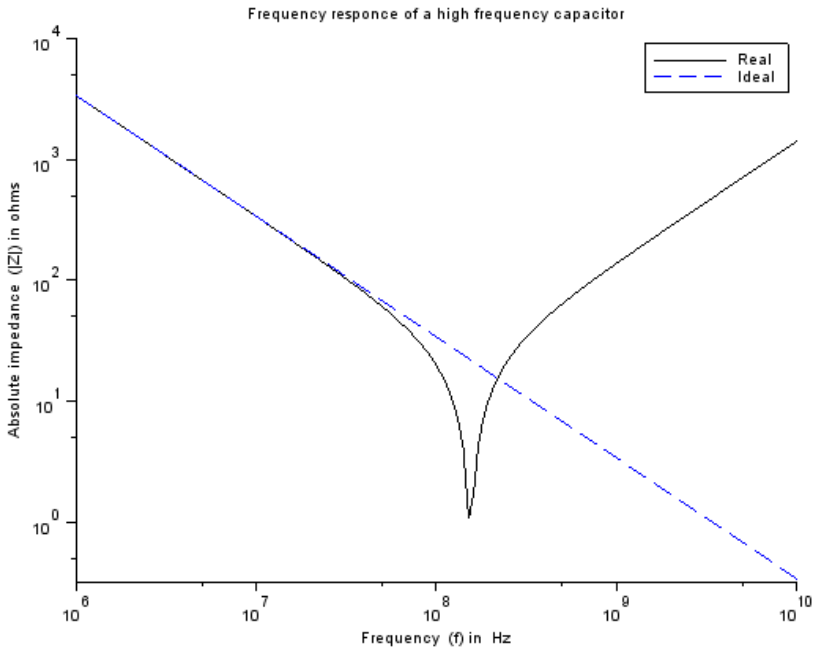


Figure 2.2: To plot frequency response of high frequency capacitor

```
13 z=1 ./(1 ./re +w*c*%i)+rs+w.*lex*%i; // impedance of
       frequency dependent capacitor
14 zideal=1 ./(w*c*%i);     //impedance of an ideal
      capacitor
15 plot2d("gll",f,abs(z));
16 plot(f,abs(zideal),"--");
17 title("Frequency responce of a high frequency
      capacitor");
18 xlabel('Frequency (f) in Hz');
19 ylabel('Absolute impedance (|Z|) in ohms');
20 legend(["Real ";"Ideal"]);
```

Experiment: 3

To plot frequency response of high frequency inductor

Scilab code Solution 3.1 To plot frequency response of high frequency inductor

```
1 //To plot frequency response of high frequency
     Inductor
2 //Scilab 5.4.1;64 bit(windows 8)
3 f=10^7:10^8:10^10;
4 w=2*%pi.*f;
5 N=3.5;        //number of turns
6 rad=0.05*0.0254;
7 len=0.05*0.0254;       //length of wire
8 a=(5*0.0254*10^-3)/2;
9 u0=4*%pi*10^-7;
10 sig_cu=64.516*10^6;
11 e0=8.854*10^-12;
12 l=(%pi*rad^2*u0*(N^2))/len;
13 c=(e0*4*%pi*rad*(N^2)*a)/len;
```

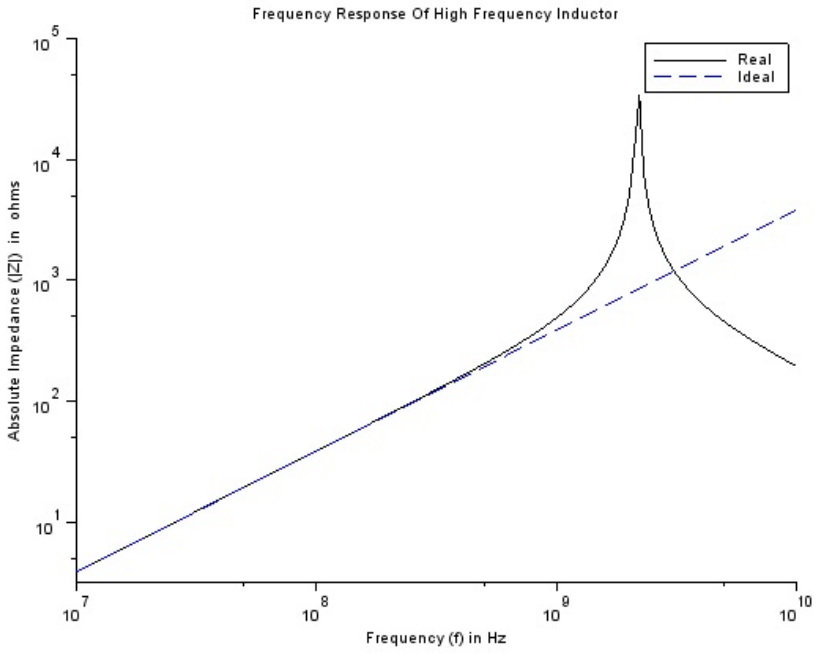


Figure 3.1: To plot frequency response of high frequency inductor

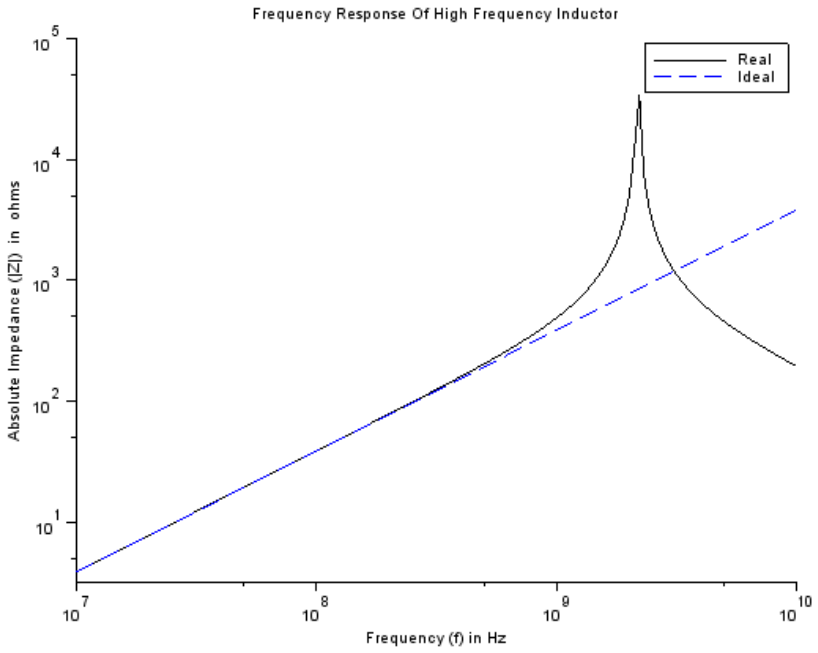


Figure 3.2: To plot frequency response of high frequency inductor

```
14 r=(2*rad*N)/(sig_cu*(a^2));
15 z=1 ./((1 ./(r+w*%i*l))+w*%i*c); //impedance
16 zideal=w*%i.*l;                  //impedance of an
      ideal inductor
17 plot2d("gll",f,abs(z));
18 plot(f,abs(zideal),"--");
19 title("Frequency Response Of High Frequency Inductor
      ");
20 xlabel('Frequency (f) in Hz');
21 ylabel('Absolute Impedance (|Z|) in ohms');
22 legend(["Real ";"Ideal"]);
```

Experiment: 4

To plot SWR circle for an impedance

Scilab code Solution 4.1 To plot SWR circle for an impedance

```
1 //To plot SWR circle for the impedance
2 //Scilab 5.4.1;64 bit(windows 8)
3 Z0=50; //define 50 Ohm characteristic impedance
4 Z=[50 48.5 75+%i*25 10-%i*5]; //define impedances
     for this example
5 Gamma=(Z-Z0)./(Z+Z0) //compute corresponding
     reflection coefficients
6 SWR=(1+abs(Gamma))./(1-abs(Gamma)); //find the SWRs
7 a=0:0.01:2*%pi;
8 for n=1:length(Z)
9
10 plot(abs(Gamma(n))*cos(a),abs(Gamma(n))*sin(a),'b','
     linewidth',2);
11 plot(real(Gamma(n)), imag(Gamma(n)),'ro');
12 end;
```

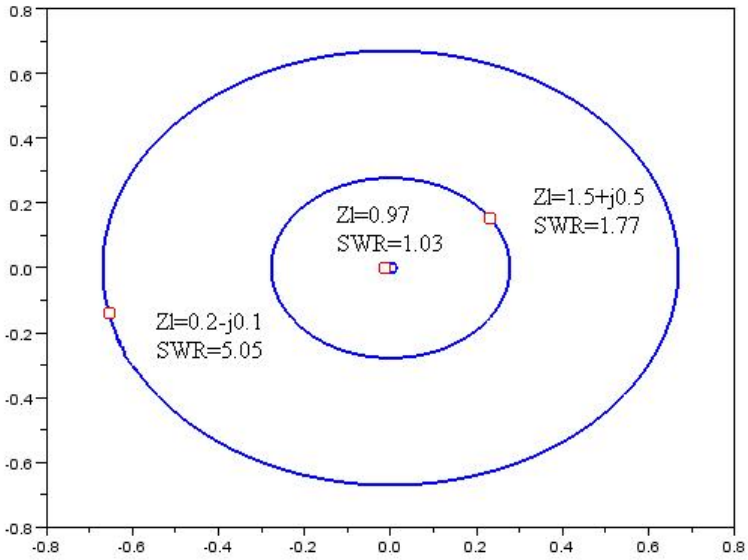


Figure 4.1: To plot SWR circle for an impedance

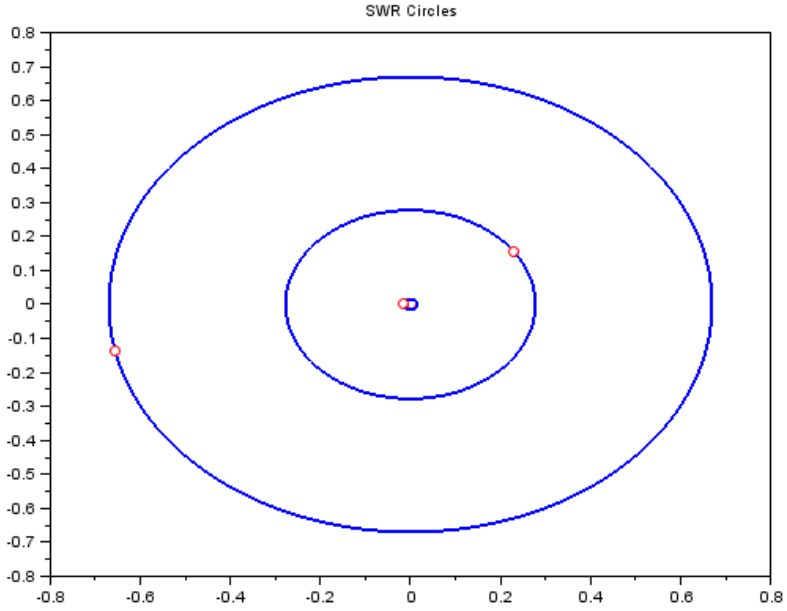


Figure 4.2: To plot SWR circle for an impedance

```
13
14 for n=1:length(Z)
15     if n~=1
16     end;
17 end;
18 title("SWR Circles");
```

Experiment: 5

To plot efficiency of different types of amplifiers

Scilab code Solution 5.1 To plot efficiency of different types of amplifiers

```
1 //To plot efficiency of different types of
     amplifiers
2 //Scilab 5.4.1;64 bit(windows 8)
3 theta=(1:1:360)/180*%pi; //define conduction angle
4
5 //compute efficiency
6 nu=-1/2*(theta-sin(theta))./(theta.*cos(theta/2)-2*
     sin(theta/2));
7
8 plot(theta/%pi*180,nu*100,'r','linewidth',2);
9 set(gca(),"auto_clear","off");
10 plot([0 180],[%pi/4*100 %pi/4*100],'b:');
11 plot([180 180],[0 %pi/4*100],'b:');
12 plot(180,%pi/4*100,'bo');
13 plot(360,50,'bo');
```

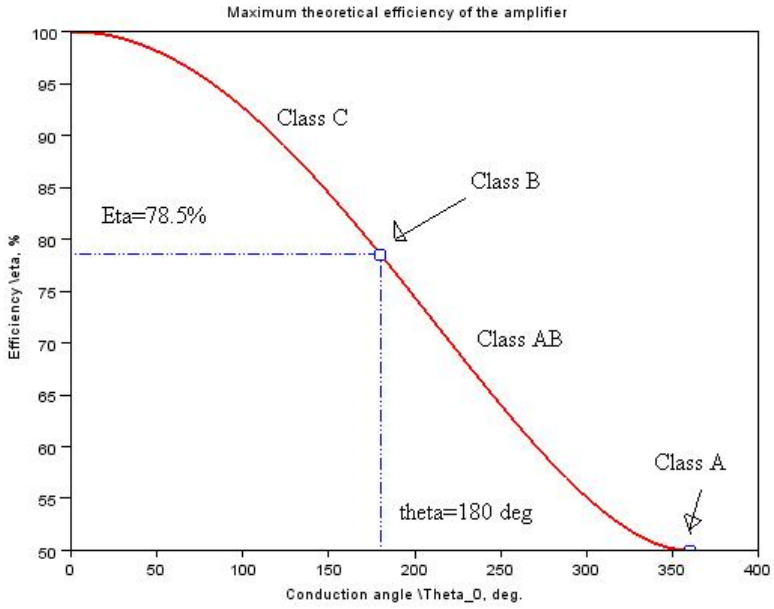


Figure 5.1: To plot efficiency of different types of amplifiers

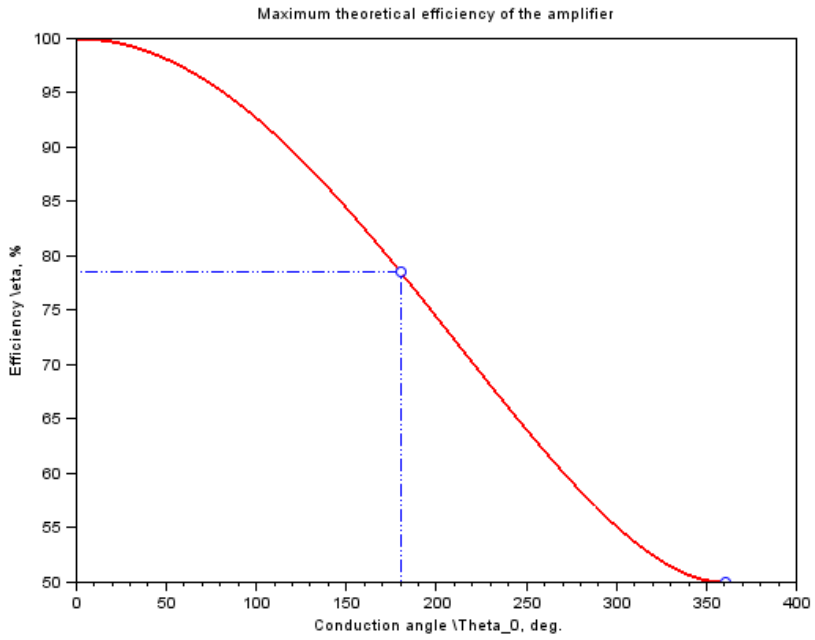


Figure 5.2: To plot efficiency of different types of amplifiers

```
14 mtlb_axis([0 360 50 100]);
15 title('Maximum theoretical efficiency of the
      amplifier');
16 xlabel('Conduction angle \Theta_0, deg.');
17 ylabel('Efficiency \eta, %');
```